






# Skoda Octavia Mk4 VRS Rear Valance Assembly Instruction

1. Get tools and assembly kit ready.
2. Secure the bumper with tape and use the pin puller to dismantle the original element.
3. Unplug the tailgate opening sensor connector.
4. Remove the sensor accessory from the original element.
5. Mount the sensor accessory on the valance as it was mounted on the original element.
6. Remove the reflective strips from the original element.



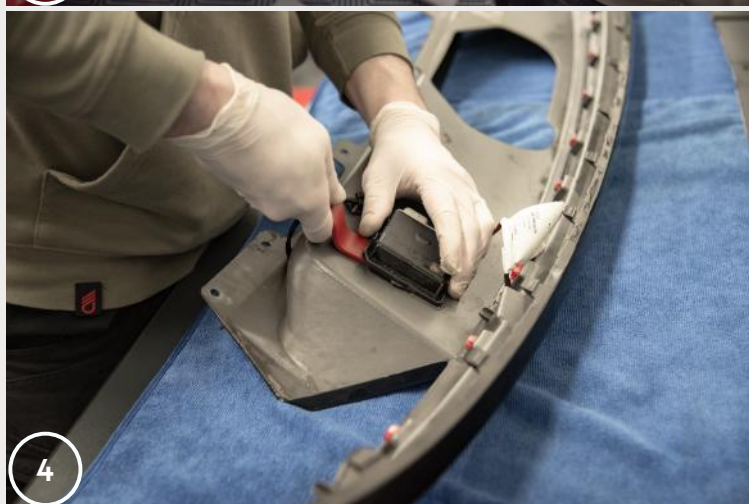

7.Remove the tape from the bumper.

8.Place the valance to the bumper so that it adheres well.

9.Use tape to mark the outline of the valance on the bumper, then remove the valance.

10.Prepare two screws to fix the exhaust tips.

11.Put the edge of the tip over the edge of the bumper mounting strip.

12.Use a screw to fasten the two edges together.





13



14



14

13. Peel off the small pieces of the valance tape protection.

14. Clean the marked part of the bumper thoroughly.

15. Place the valance to the bumper as marked with the tape and press it to the bumper.

16. Remove the hook cover.

17. Clip the trunk lid opening sensor connector.



15



16



17



17



18



19



20

18. In the groove in the valance, make a hole through the valance and bumper.

19. Insert the screw into the hole and tighten it firmly to secure the valance to the bumper.

20. Do this in four places along the length of the groove in the valance.

21. Screw the lower part of the valance through the holes.

22. Remove the protective film from the valance.



20



21



21



22



23.Remove the rest of the valance tape protection and press the valance to the bumper.

24.Into the groove in the valance, insert the reflective strips.

25.Reinstall the flap covering the hook

26.Done.

